



TOTAL CONTROL™

High Performance Access Router Manager (HiPer™ ARM) Quick Reference Card for Unix

Read on for quick tips on using HiPer ARC's graphical user interface (GUI).

HiPer ARM Lets You...

- Set HiPer ARC user parameters.
- Configure the IP or IPX network for HiPer ARC.
- Identify hosts and servers.
- Set RADIUS security and authentication.
- Upgrade HiPer ARC software.

To Install HiPer ARM...

- HiPer ARM is installed as a part of the Transcend installation, via the TCM option.
- When you follow the onscreen instructions to install Transcend, make sure that you click the TCM **Install** option. The TCM installation includes HiPer ARM software.

Start HiPer ARM...

- Via a currently running network management application like HP® Open View Network Node Manager or SUN® Net Manager, or
- Launch from the TCM Menu bar item, **TCM HiPer Access Router Manager**.

To Start HiPer ARM Online Help...

Click **Help** on the Menu bar.

Toolbar Highlights...

Toolbar buttons are shown next. Just click to start these functions.

IMPORTANT: You must always click **Set** after changing a parameter.



Wizard

Start Wizard.



New

Open connection.



Close

Terminate connection.



Save Config

Save configuration.



Restore

Restore from a file.



Save to NVRAM

Save to non-volatile memory.



Counters

Check statistics.



Globals

Set network data.



Interfaces

Set Serial/Ethernet interface.



Hosts

Identify hosts/servers.



Routes

Set IP routes.



Networks

Add new IP networks.



Users

Set user/password.



Filters

Define filters.



Modems

Set modem strings.